


# R.A.D. SYSTEMS

## Recoil Absorption Devices Operation & Maintenance Instructions for the R.A.D. System #1a

### Pad Adjustment

To unlock the pad adjustment use the 5/8 wrench supplied with the unit to loose the Adjuster Screw. Position the pad to the desired location and retighten.

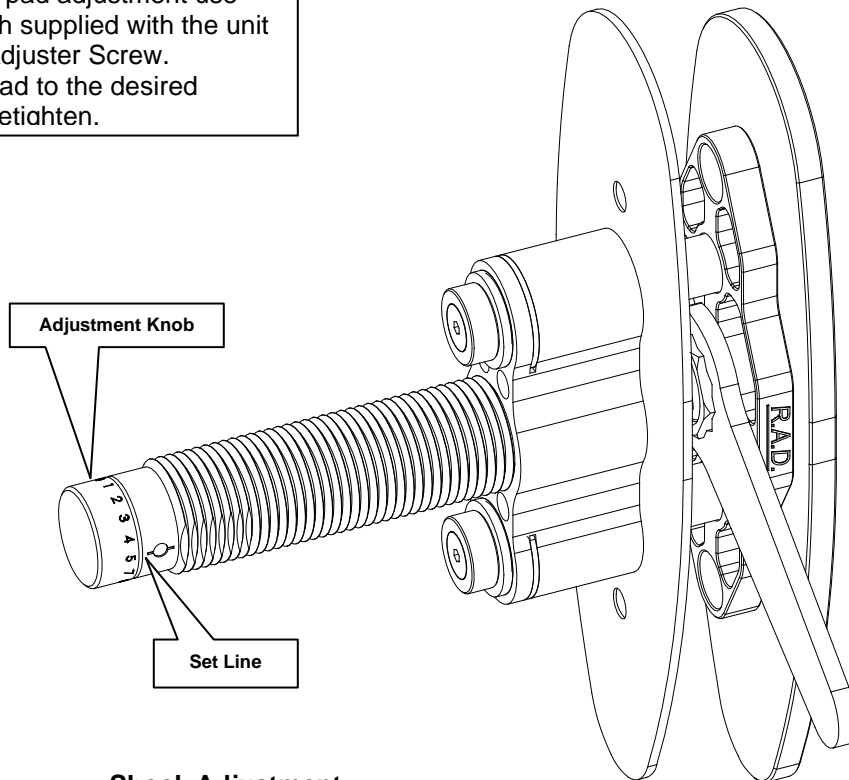

### Shock Adjustment

To adjust the resistances of the hydraulic shock absorber, or to remove the system from the stock, follow these steps.

1. Loosen the pad adjustment with the wrench provided.
2. Rotate the adjustment plate to allow access to the 2 mounting screws.
3. Use a 3/32" Allen Wrench to loosen the mounting screws and remove the unit from the stock.
4. Rotate the knob to the desired setting.


The settings on the adjustment range from 1 to 8 with 8 being the heaviest and 1 the lightest.

\*Note: To light of setting, for a load will result in an undesirable effect.

# Recoil Absorption Devices Operation & Maintenance Instructions

## **Maintenance**

With some simple care **R.A.D Systems** will last for a lifetime of shooting pleasure. To insure this it is recommended that once yearly or every 5000 rounds that the system is disassembled and lubricated. The following steps outline the steps to disassemble the unit.

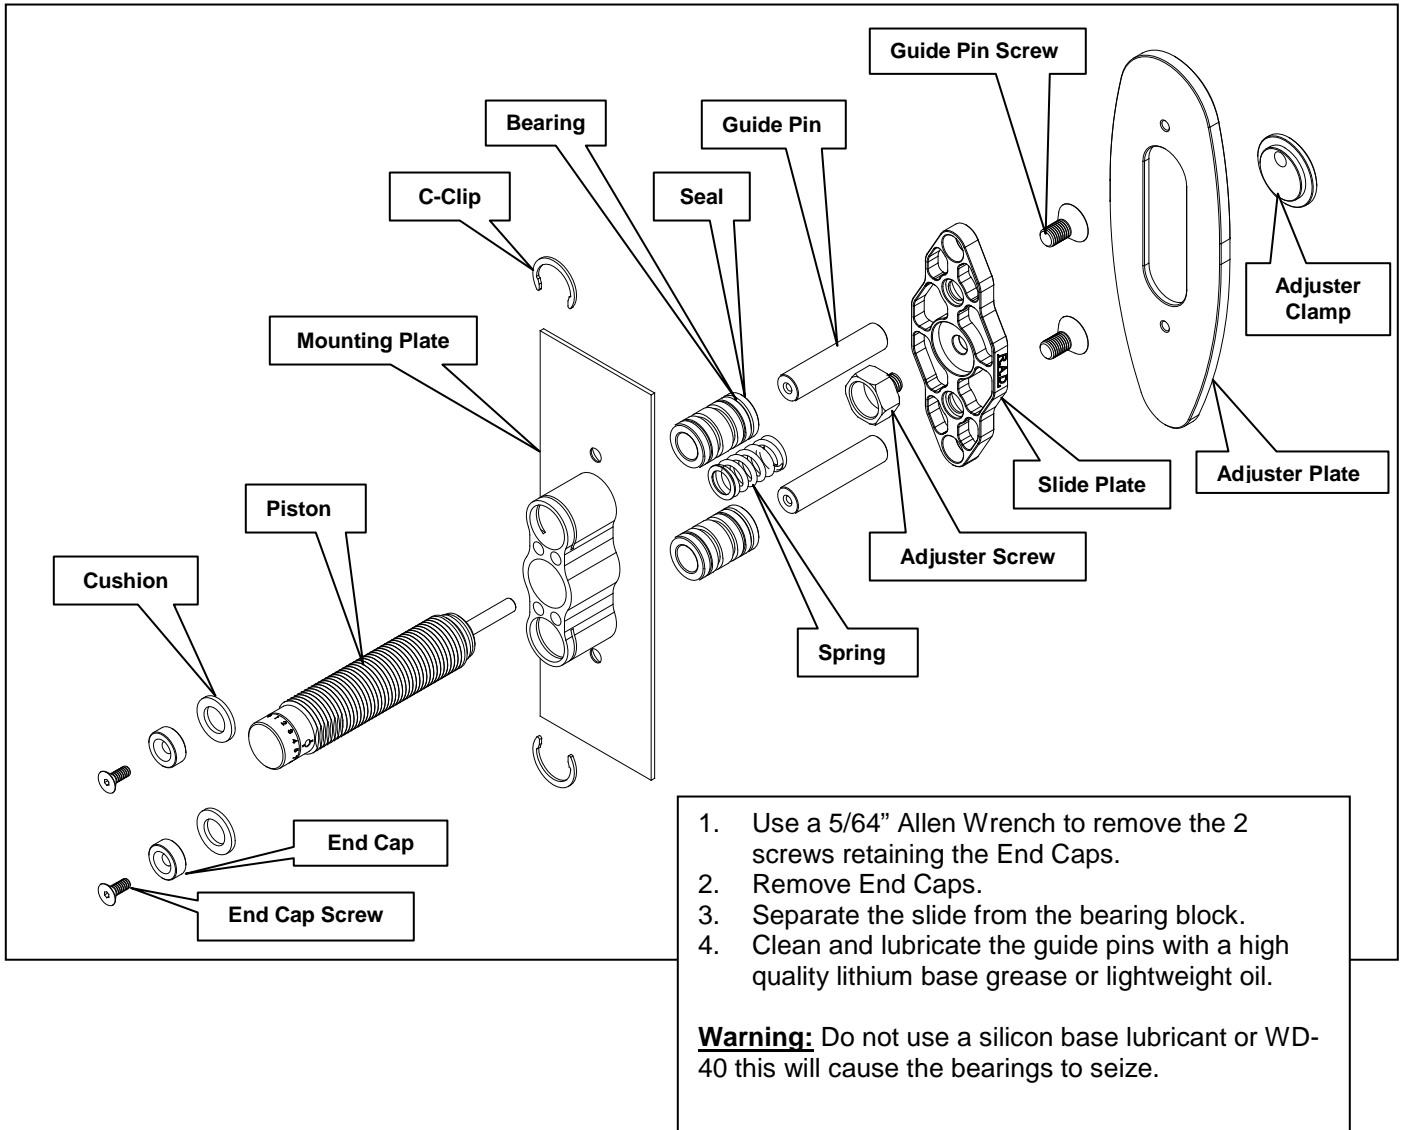

**R.A.D Systems** are designed and tested to provide shooters with years of trouble free enjoyment. Each system is guaranteed free from defect or failure for 3 years from date of manufacture.

**For Service Contact:**  
**Hart Systems, L.L.C.**

Rt. 1 Box 214B, Queen City, MO 63561  
(660) 341-4829